



Customer Service

PowerA.com/Support

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories,
please visit **PowerA.com/Support**.

POWERA™ ADVANTAGE **WIRELESS** **CONTROLLER** for Nintendo Switch™ 2

USER MANUAL

MODEL: NSGPAWL

WORKS WITH:

 
 
Nintendo Switch™ 2

Nintendo Switch™ — OLED Model

Nintendo Switch™

Nintendo Switch™ Lite



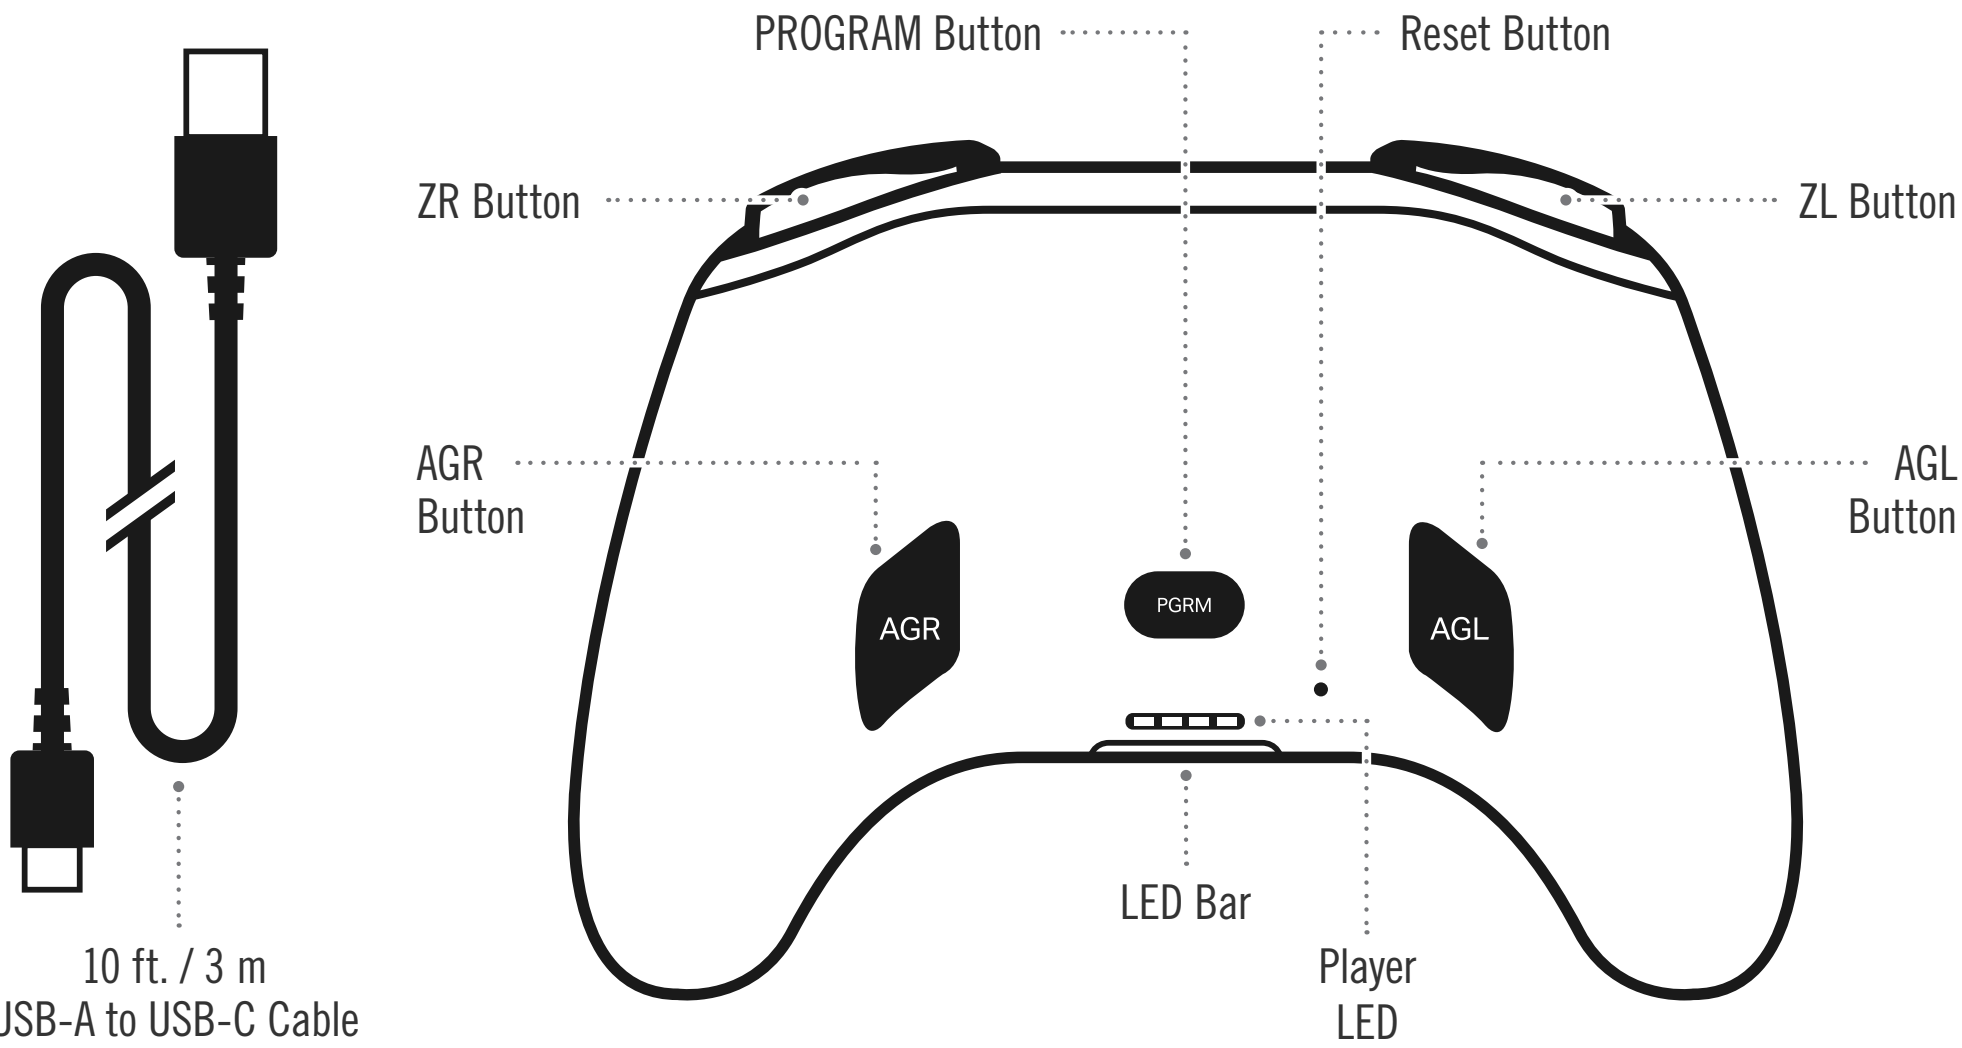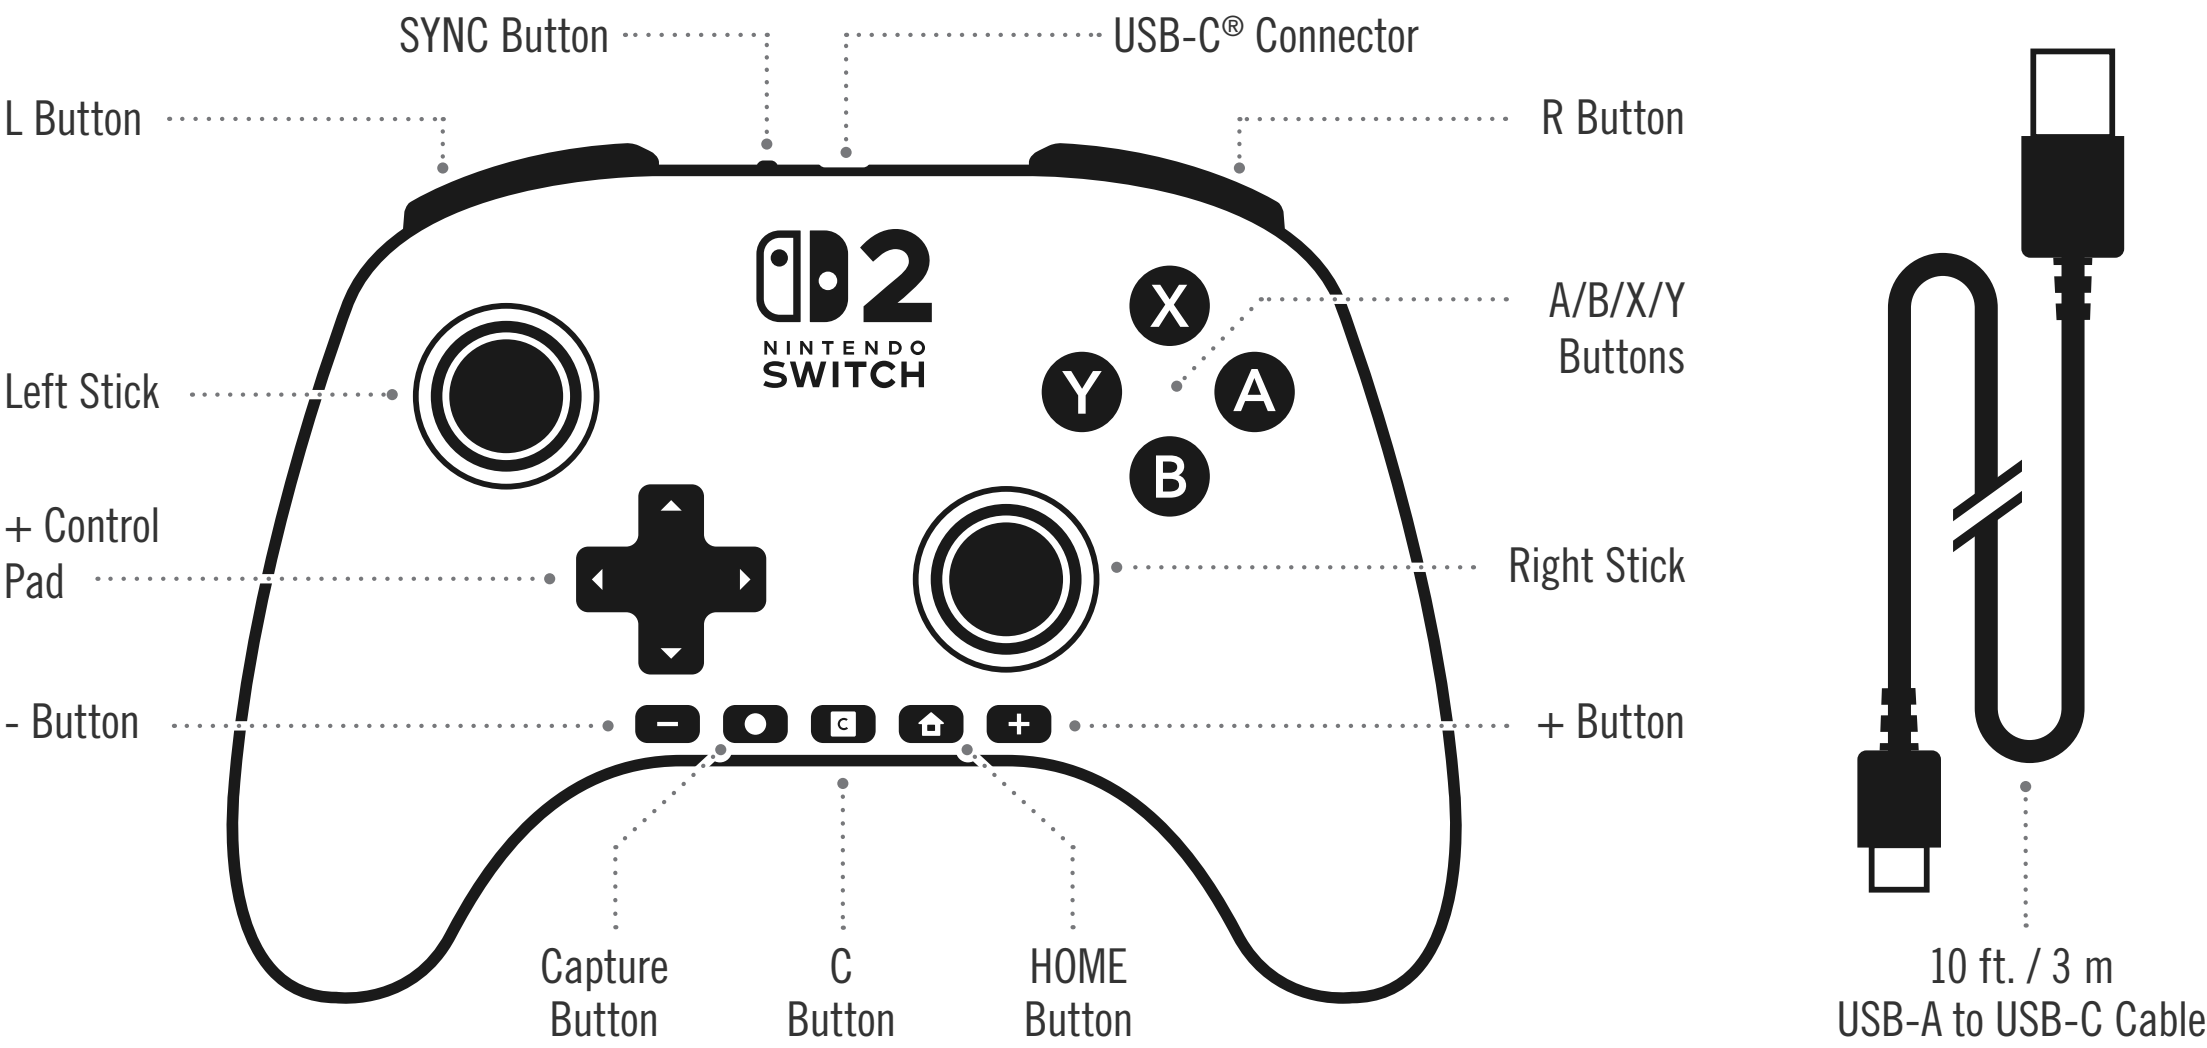

CONTENTS

 
- PowerA Advantage Wireless Controller for Nintendo Switch™ 2
- 10 ft. / 3 m USB-A to USB-C Cable

COMPATIBILITY

- ✓ Nintendo Switch™ 2
- ✓ Nintendo Switch™ — OLED Model
- ✓ Nintendo Switch™
- ✓ Nintendo Switch™ Lite


PAIRING

1. Wake the Nintendo Switch™ 2 or Nintendo Switch™ console by pressing the power button on the console:

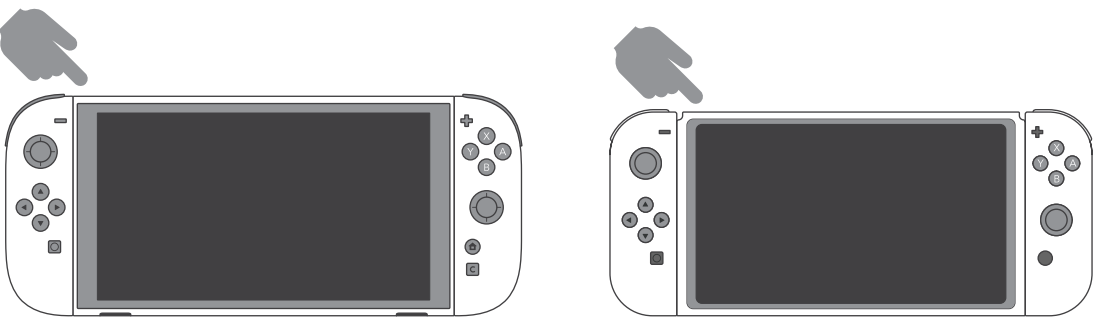


2. Enter the HOME menu on the Nintendo Switch™ 2 or Nintendo Switch™ console by following the on-screen instructions.

 
3. Select “Controllers” on the HOME menu:

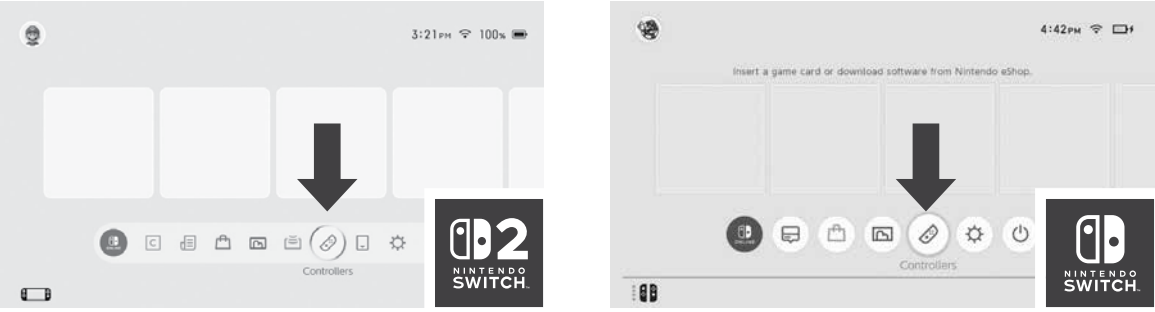

 
4. Select “Change Grip/Order” on the controller menu:

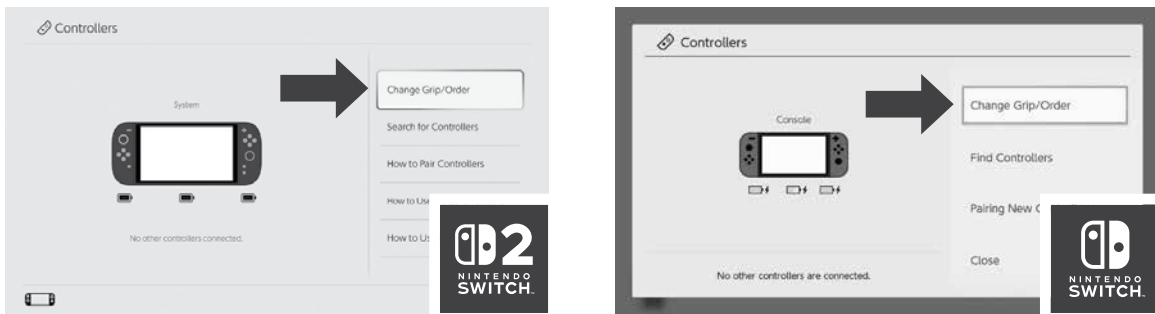

 5. Once on the pairing screen pictured, hold down the SYNC button on the controller for at least three seconds. The player LED will cycle from left to right to indicate the controller is in

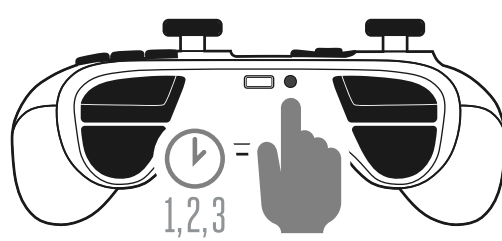

 pairing mode. **Do not touch the Left Stick or Right Stick on your controller during this step.**

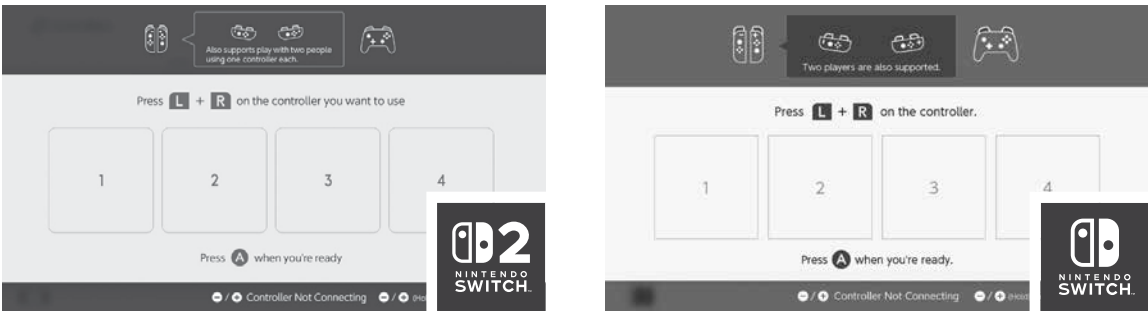

6. A “Paired” message will appear on screen when the controller is connected, and the LED Bar on the controller will turn solid white. Press the A button to end the process and start playing.



NOTE:

 
- **Do not touch the Left Stick or Right Stick when pairing your controller.**
- Please ensure your Nintendo Switch™ 2 or Nintendo Switch™ system is using the most recent system update for optimal compatibility with PowerA wireless controllers. Check your Nintendo Switch™ 2 or Nintendo Switch™ system for any updates via “System Settings” on the HOME menu.
- Please ensure your PowerA Advantage Wireless Controller for Nintendo Switch™ 2 is using the latest firmware. Check [PowerA.com/Support](https://www.powera.com/support) for any potential updates.
- After the controller is paired with a Nintendo Switch™ 2 or Nintendo Switch system, it will auto-connect again when the system and controller are powered ON.
- Up to 8 controllers can be connected to the Nintendo Switch™ 2 or Nintendo Switch™ system simultaneously.
 - The number of wired controllers that can be connected is dependent on the number of available USB ports on the Nintendo Switch™ 2 or

Nintendo Switch™ dock.

- The right and left Joy-Con™ 2 or Joy-Con™ each count as one controller. So if both are paired to the console, it will count as two controllers.

- A maximum of two wireless controllers can be connected to a Nintendo Switch™ 2 or Nintendo Switch system while using Bluetooth® audio. To pair additional wireless controllers, disconnect the Bluetooth audio device.
- Pressing the SYNC Button while connected will turn the controller off.
- This controller can be used when the Nintendo Switch™ 2 or Nintendo Switch™ console is docked or undocked.
- Not for use with Joy-Con™ 2 or Joy-Con™ only games.
- This controller does not support HD rumble 2, HD rumble, IR camera, or amiibo™ NFC.
- Do not use included cable for purposes other than connecting the PowerA controller.
- C Button is not supported on Nintendo Switch™ systems.

CHARGING

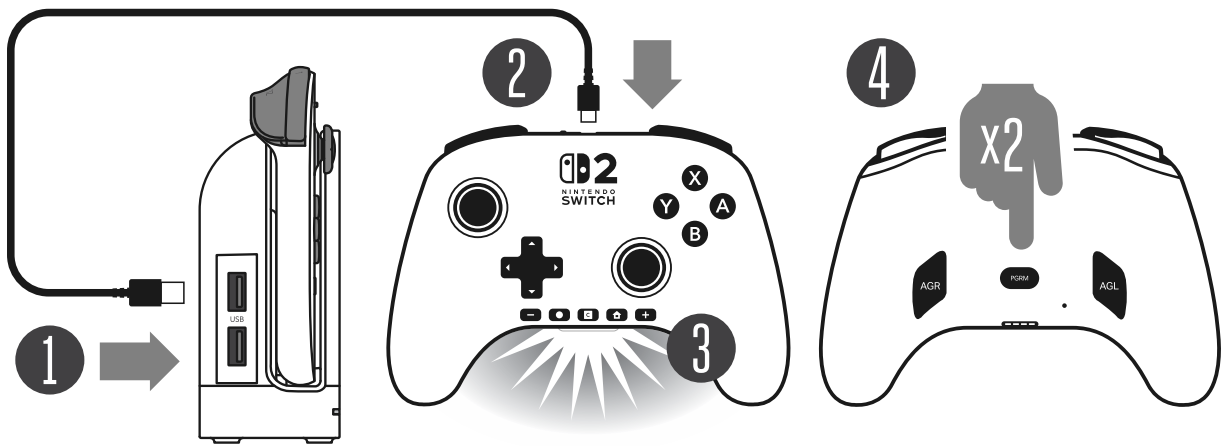

1. Connect the USB-A end of the USB cable to the Nintendo Switch™ 2 or Nintendo Switch™ dock.
2. Connect the USB-C end of the USB cable to the controller.
3. The LED Bar will pulse orange while charging. Once fully charged, the LED Bar will turn back to solid white if the controller is on and paired or will turn off if the controller is off.
4. Double press the PROGRAM Button to check the battery level. The LED Bar color will indicate the battery level:
GREEN = 100%–96% YELLOW = 95%–60%
ORANGE = 59%–20% RED = 19%–0%

NOTE:

- Charge your controller at least once every 45 – 60 days (regardless of use) so that the battery retains its ability to charge. Battery capacity will gradually reduce over time with repeated charging.
- When the battery is near depletion, the LED Bar will blink red.

PROGRAMMING ADVANCED GAMING BUTTONS

1. Hold the PROGRAM Button down for 3 seconds.

- The LED Bar will slowly blink blue, signaling the controller is in program mode.

2. Press one of the following buttons you wish to assign to an Advanced Gaming Button: A, B, X, Y, L, R, ZL, ZR, Left Stick Press, Right Stick Press, or +Control Pad.

- The LED Bar will blink quickly in blue.

3. Press the Advanced Gaming Button (AGR or AGL) that you wish to perform that function.

- The LED Bar will return to its previous state signaling the Advanced Gaming Button has been programmed.

4. Repeat for the remaining Advanced Gaming Button.

NOTE:

- Advanced Gaming Button assignments will remain in memory even after your controller is disconnected.

RESETTING ADVANCED GAMING BUTTONS

1. Hold the PROGRAM Button down for 3 seconds.

- The LED Bar will slowly blink blue, signaling the controller is in program mode.

2. Press either AGL or AGR to individually reset that button or hold down the PROGRAM Button for 5 seconds to reset both simultaneously.

- The LED Bar will return to its previous state signaling the Advanced Gaming Button has been reset.

CONTROLLER SPECIFICATIONS

Model Number . NSGPAWL	FCC ID YFK-NSGPAWLDA
IC ID 9246A-NSGPAWLDA	Connector USB-C
USB Interface USB 2.0	RF Frequency 2.4 – 2.4835 GHz
Max E.I.R.P. -218 dBm	Stick Interface 12-bit Hall Effect
Weight 216 g	
Battery Lithium-ion, 3.7 V, 900 mAh, 3.33 Wh	
Dimensions 149 mm L × 105 mm W × 62 mm D	

CABLE SPECIFICATIONS

Connectors USB-A to USB-C	Length 10 ft. / 3 m
Weight 75 g	Voltage 5 V
Current 500 mA normal operating current, 3 A max	

TROUBLESHOOTING

For latest FAQs, firmware, and support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://www.powera.com/support).

Q1. Why isn't my controller connecting to my Nintendo Switch™ 2 or Nintendo Switch™ system?

- A1. Confirm the battery is charged by connecting the controller to the console with the supplied USB cable.
- A2. Re-pair the controller with the Nintendo Switch™ 2 or Nintendo Switch™ console following the steps in the PAIRING section. The controller can only be paired to one console at a time.
- A3. Use a paper clip to press the reset button on the back of the controller and reset the controller to factory settings.
- A4. Confirm that your Nintendo Switch™ 2 or Nintendo Switch™ has the latest System Update installed.

Q2. Why are my sticks scrolling/driftng?

- A1. It is important that when the controller is paired or reconnected to the Nintendo Switch™ 2 or Nintendo Switch system that the sticks are not touched. If this happens, turn the controller off by pressing the SYNC button once, then turning it back on by pressing the HOME button without touching the sticks.

- A2. Make sure the controller battery is not depleted.

Q3. Why don't the motion controls work on my controller?

- A1. Turn the controller off by pressing the SYNC button once and turn it back on by pressing the HOME button without touching the sticks.
- A2. Confirm that your Nintendo Switch™ 2 or Nintendo Switch™ has the latest System Update installed.

Q4. Why doesn't vibration, IR camera, or amiibo™ work?

- A1. This controller does not support HD rumble 2, HD rumble, IR camera, or amiibo™ NFC.

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://www.powera.com/support).

WARRANTY

2-Year Limited Warranty: Visit [PowerA.com/support](https://www.powera.com/support) for details.

ADDITIONAL LEGAL

© 2025 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

© Nintendo. Nintendo Switch is a trademark of Nintendo.

USB-C® is a registered trademark of USB Implementers Forum.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

[ACCOBRANDS.com](https://www.powera.com) | [POWERA.com](https://www.powera.com)