



Customer Service
PowerA.com/Support

2-YEAR LIMITED WARRANTY For warranty details or support
with your authentic PowerA accessories, please visit **PowerA.com/Support**.





POWERA™ ADVANTAGE WIRELESS CONTROLLER

for Xbox Series X|S

USER MANUAL

MODEL : XBGPAWL



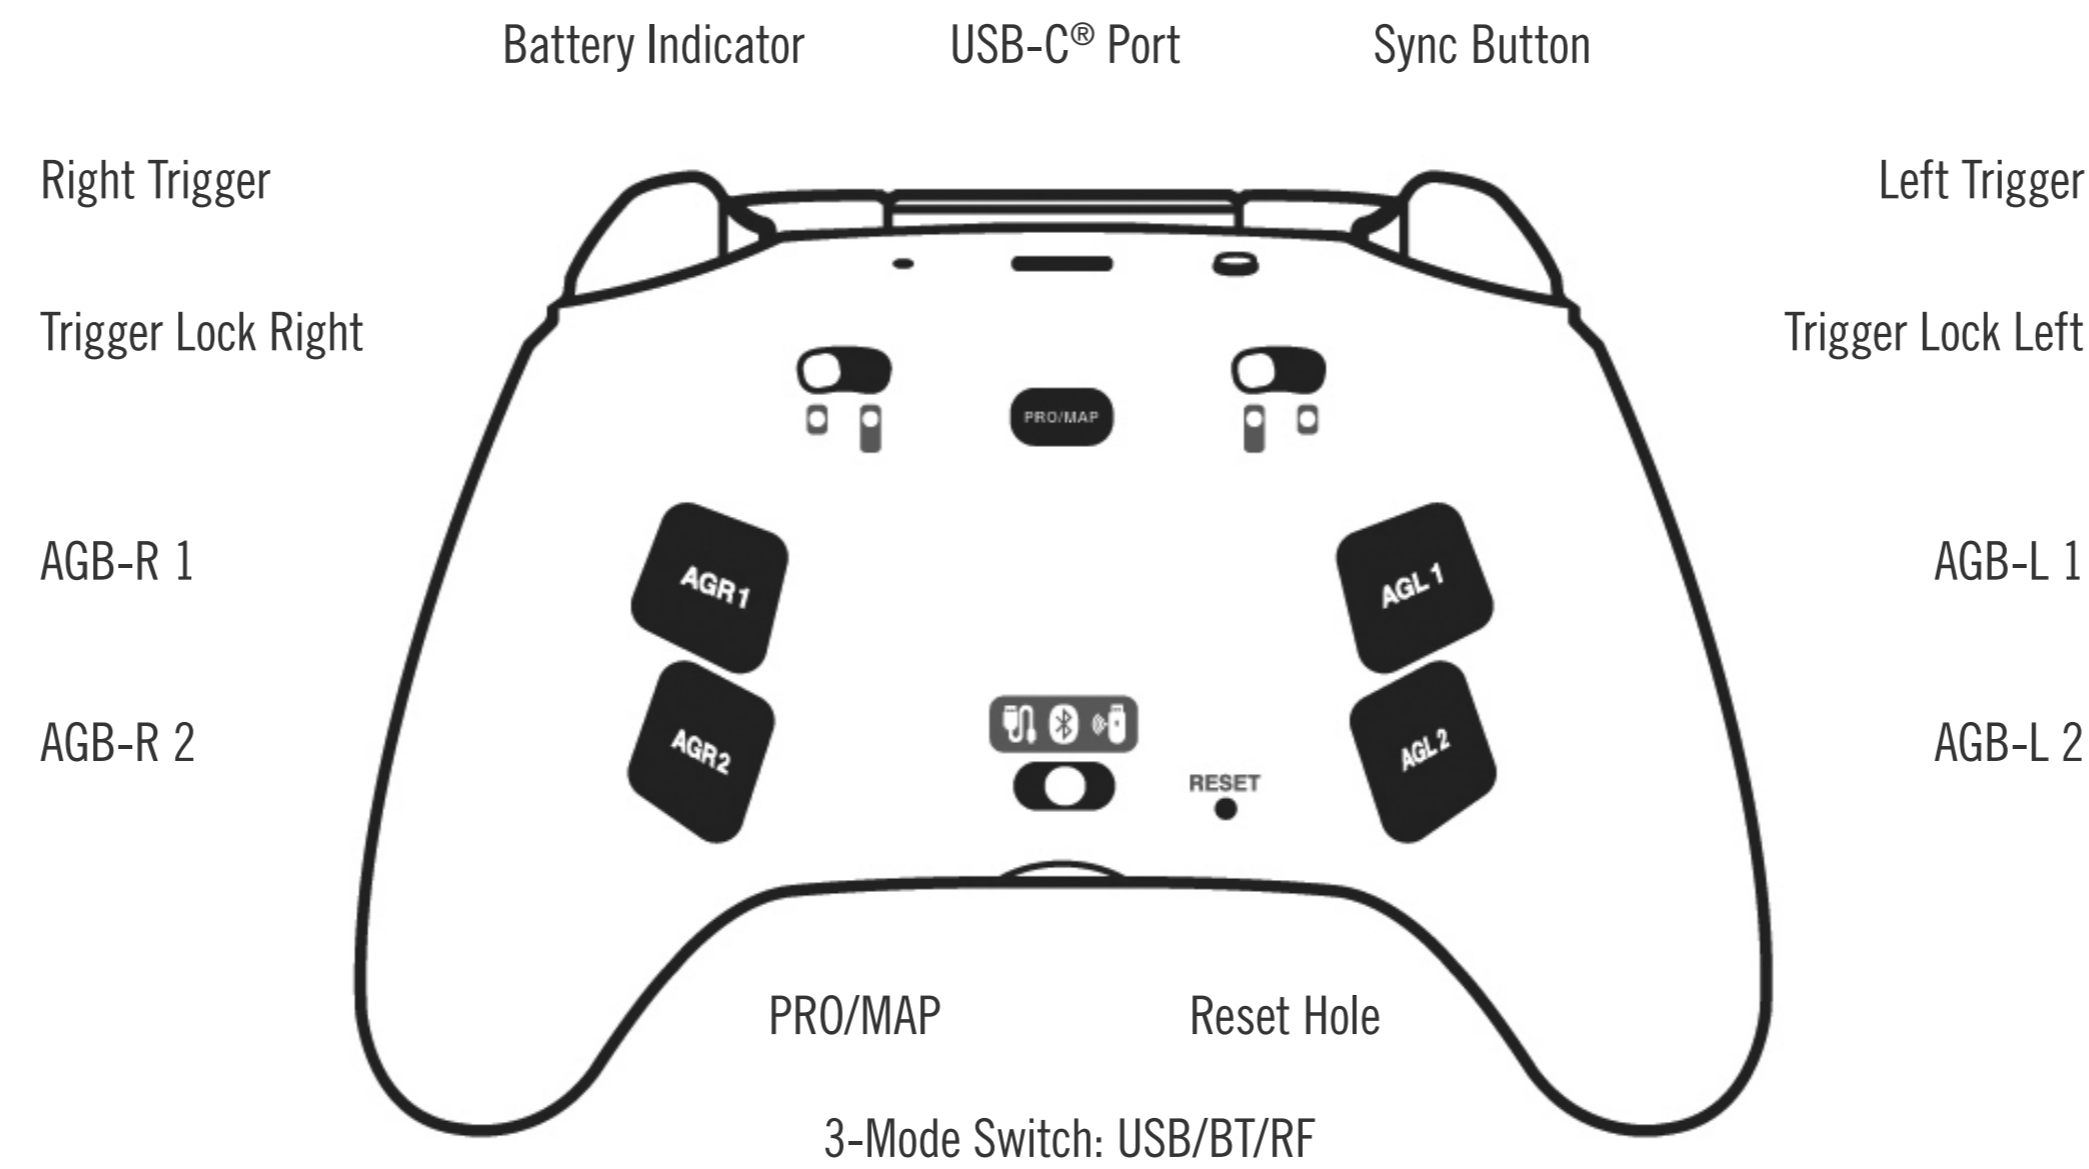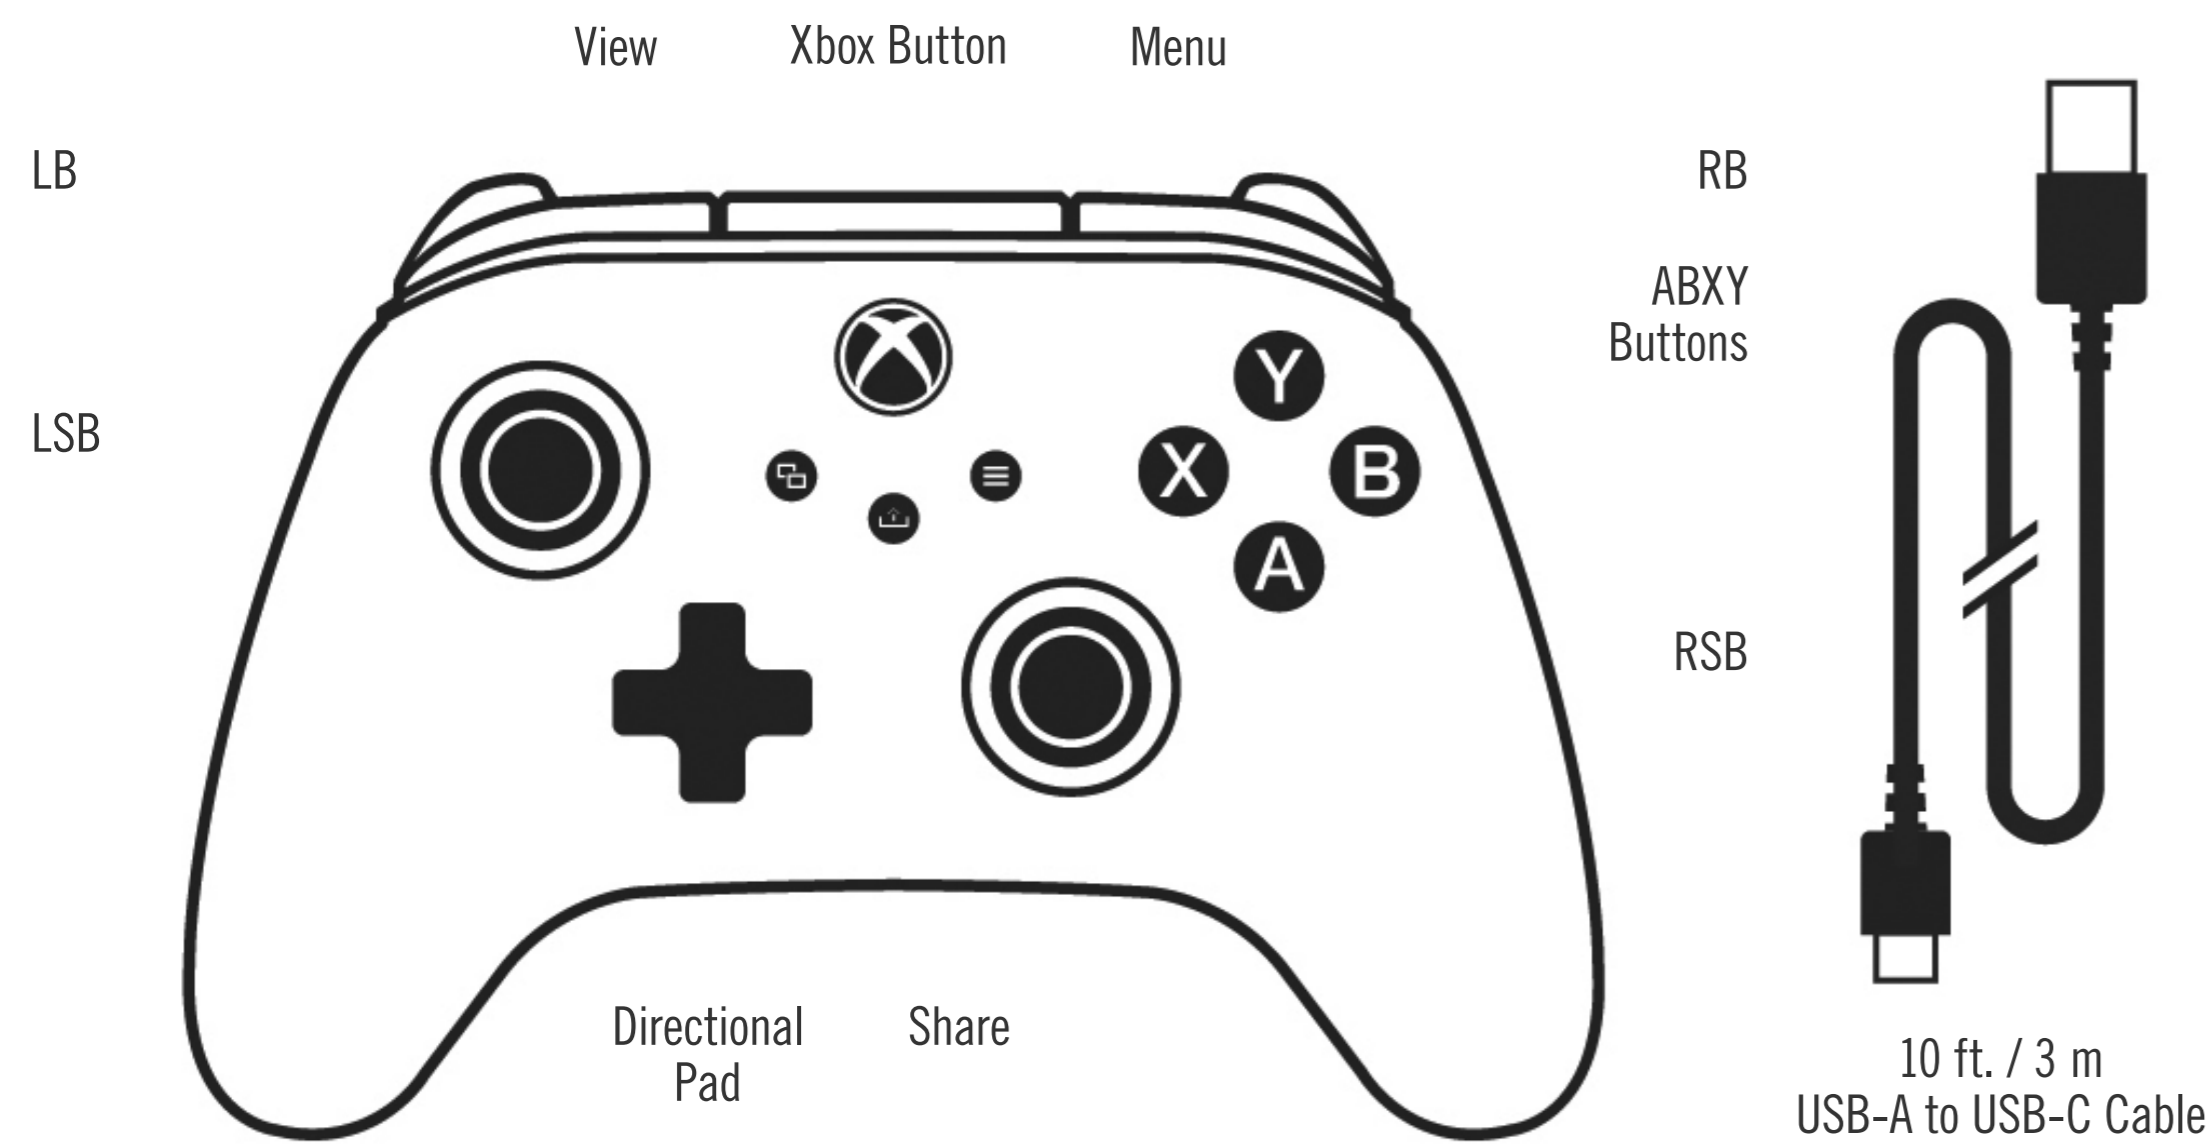

PROFILE SETTINGS



- Quick-tap the PRO/MAP button to cycle through 3 different profile settings. The Xbox Advantage Wireless Controller can store up to 3 profiles at a time locally. 3 profiles are loaded by default on the controller. NOTE: STANDARD profile can be changed locally on the controller. FPS and ACTION/RPG must be changed and managed via the app. These can be modified to your own settings via the Gamer HQ app, and can be saved on your controller.
 - STANDARD** (PINK profile color)
 - Default button mapping
 - FPS** (GREEN profile color)
 - AGL1 = A B. AGL2 = Y
 - AGR1 = RSB D. AGR2 = X
 - ACTION/RPG** (CYAN profile color)
 - AGL1 = X B. AGL2 = B
 - AGR1 = Y D. AGR2 = A


CONTENTS

- PowerA Advantage Wireless Controller for Xbox Series XIS
- 10 ft. / 3 m USB-C® to USB-A Cable
- Quick Start Guide
- USB Wireless Adapter

CONNECTING VIA WIRED USB MODE



- Select “USB” (🔌) on the 3 mode switch on bottom of controller.
- Using the included USB-C Cable, connect to the USB-C port at the top of the controller and connect the other end to an available USB port on an Xbox Series XIS, Xbox One, Windows 10/11 PC, or other device with USB-A input compatible with Xbox Play Anywhere.

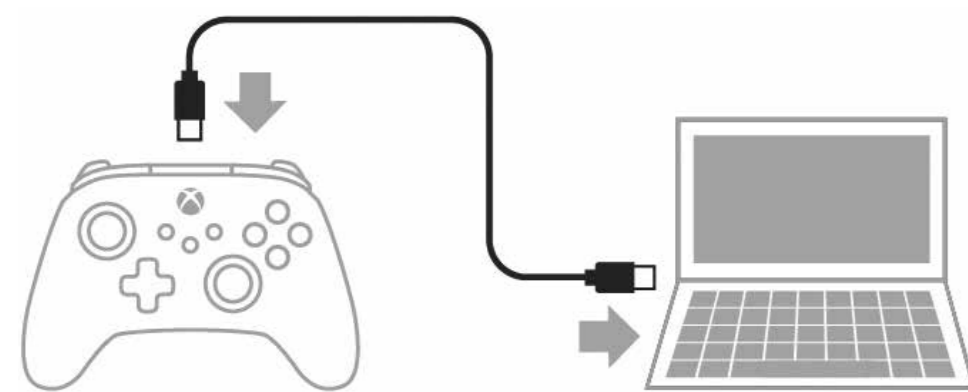


- If the controller is off, hold the Xbox button (🎮) to turn on (surrounding LED ring will illuminate WHITE).

CONNECTING VIA WIRELESS MODE: 2.4 GHZ



- Select “2.4 Ghz” (📶) on the mode switch on bottom of controller.
- Insert wireless adapter into open USB-A Port of Xbox Series XIS, Xbox One, Windows 10/11 PC, or other device with USB-A input compatible with Xbox Play Anywhere.

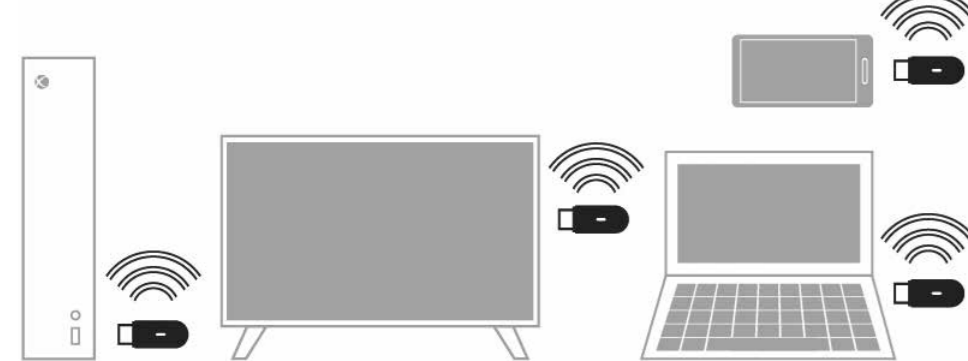

- If the controller is off, hold the Xbox button (🎮) to turn it on (surrounding LED ring will flash WHITE).
- 2.4 GHz should be paired to the Xbox Advantage Wireless Controller by default. If it is not paired, please follow the instructions below to sync the controller to the adapter:
 - Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
 - Repeat this step using the SYNC button on the top of the 2.4GHz adapter.
 - Both controller and adapter will flash several times and then pair. Once successfully paired, both LEDs on controller and adapter will be solid WHITE.

CONNECTING VIA WIRELESS MODE: BLUETOOTH




- Select “BT” (📶) on the mode switch on bottom of controller.
- If controller is off, press the Xbox button (🎮) to turn on (the surrounding LED ring will illuminate BLUE).
- Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (the LED ring will flash BLUE rapidly).
- Enter the Bluetooth settings on any device compatible with Xbox Play Anywhere.



- Select “Xbox Advantage Wireless Controller”. LED ring will turn solid BLUE once connected.

NOTE: A previously paired device will automatically pair to the controller when powered on.

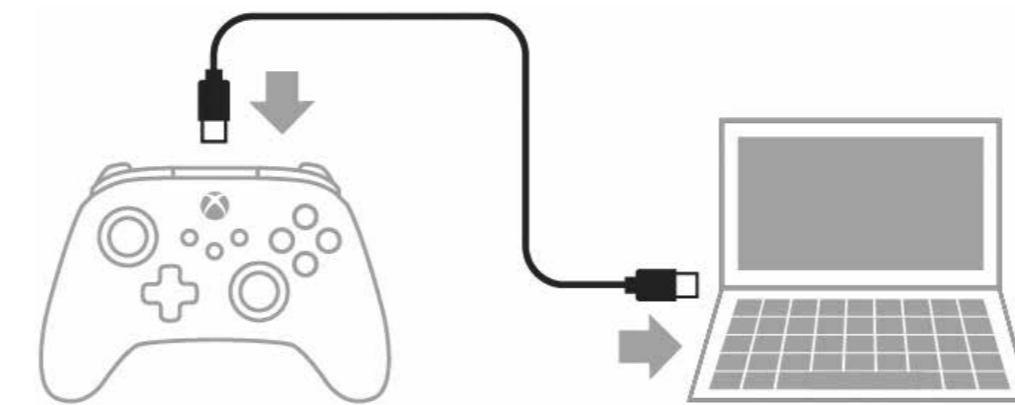


CHARGING CONTROLLER VIA USB




For best results, fully charge controller prior to first use.

- Connect the included USB-C cable to the USB-C port at the top of the controller and connect the USB-A end to an available USB port on an Xbox Series XIS, Xbox One, Windows 10/11 PC, or other device capable of providing charging via USB.
- When charging, the LED battery indicator will flash AMBER. For uninterrupted gaming, switch to Wired mode to continue playing while charging.
- When fully charged, the LED battery indicator will be solid WHITE. If playing in Wired mode while charging, switch back to either Wireless mode and remove USB cable once charge is complete.
- When battery is low, the LED ring will flash RED.

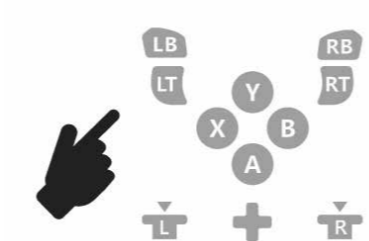

ADVANCED GAMING BUTTONS PROGRAMMING

- Press the PRO/MAP Button on the back of the controller for 3 seconds.
 
- The Xbox button LED ring will flash WHITE, signaling the controller is in assign mode.
 
- Press one button (A/B/X/Y/LT/RT/LB/RB/Left Stick Press/Right Stick Press/D-pad) you wish to assign to an Advanced Gaming Button.
 

- The Xbox LED ring will start flashing rapidly once the button is pressed.
- Then press the Advanced Gaming Button (AGR1/AGR2 or AGL1/AGL2) that you wish to perform selected button function. The Xbox button LED ring will turn solid WHITE, signaling the Advanced Gaming Button has been set. Repeat for the remaining Advanced Gaming Buttons.
 

NOTE: Advanced Gaming Button assignments will remain in memory after use.

RESETTING THE ADVANCED GAMING BUTTONS

- Hold the PRO/MAP Button down for 2-3 seconds. The Xbox Button LED will slowly flash, signaling the controller is in assign mode.
 
- Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.
 

TACTICAL TRIGGER LOCK ADJUSTMENT



NOTE: Tactical trigger lock switch sets the physical trigger depth preferences, and preset profiles or digital trigger settings in GamerHQ app set the actuation or deadzone percentage for each trigger pull.

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit [PowerA.com/Support](https://www.accobrand.com/Support).

PATENTS

<https://www.accobrand.com/PATENTS/>

ADDITIONAL LEGAL

© 2026 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

Microsoft, Xbox, Xbox “Sphere” Design, Xbox Series XIS, Xbox One, and Windows are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

USB-C® is a registered trademark of USB Implementers Forum.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

ACCO Brands USA LLC
4 Corporate Drive, Lake Zurich, IL 60047

[ACCOBRANDS.com](https://www.accobrand.com) | [POWERA.com](https://www.powera.com)



SWITCHING MODES - XINPUT AND DIRECT INPUT (2.4 RF / USB WIRED MODE ONLY)

- Press and hold the SHARE and VIEW buttons simultaneously for 3 seconds.
- LED indicator will flash PURPLE 3 times to indicate MODE has been changed.
- To change modes again, press and hold SHARE and VIEW buttons again for 3 seconds until LED flashes WHITE 3 times.

COMPLIANCE IDENTIFICATION & SPECIFICATIONS

WIRELESS CONTROLLER

Model: XBGPAWL | FCC ID: YFK- YFK-XBGPAWLDA
IC: 9246A-XBGPAWLDA
Battery: Lithium-ion, 3.7 V, 800 mAh, 2.96 Wh
Frequency Range: 2.4 – 2.48 GHz | E.I.R.P: 7.22 dBm

2.4 GHZ DONGLE

Model: XBGPWLTx | FCC ID: YFK-XBGPWLDB
IC: 9246A-XBGPWLDB
Frequency Range: 2.4 – 2.48 GHz | E.I.R.P: 1.19 dBm

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit [PowerA.com/support](https://www.powera.com/support).

The Gamer HQ app can be used to test, calibrate, and customize settings on your controller. With your controller connected to Xbox or Windows 10/11 PC via USB-C cable you can:

- Update firmware to the to the latest version
- Test your controller’s buttons and analog controls, vibration functionality, and audio
- Recalibrate analog inputs for proper control response
- Set trigger and thumbstick deadzone/active area
- Set game-chat volume balance and vibration intensity
- Remap buttons (including Advanced Gaming Buttons)

You can also create custom profiles to use for different games or players, and push up to three profiles to your controller for convenient access via the PROFILES button while you are gaming. You can download the Gamer HQ app from the Windows Store using Xbox or a Windows 10/11 PC.