

# Quartet® Anywhere™ Repositionable Dry-Erase Surface


## Installation and Usage Instructions

### Recommended Surfaces:

Painted drywall, glass, painted steel, finished wood, whiteboards, chalkboards and stone.

### Surface Preparation:


Clean and allow surface to fully dry prior to application. Ensure surface is smooth and free of dust, chipped paint, or other imperfections.

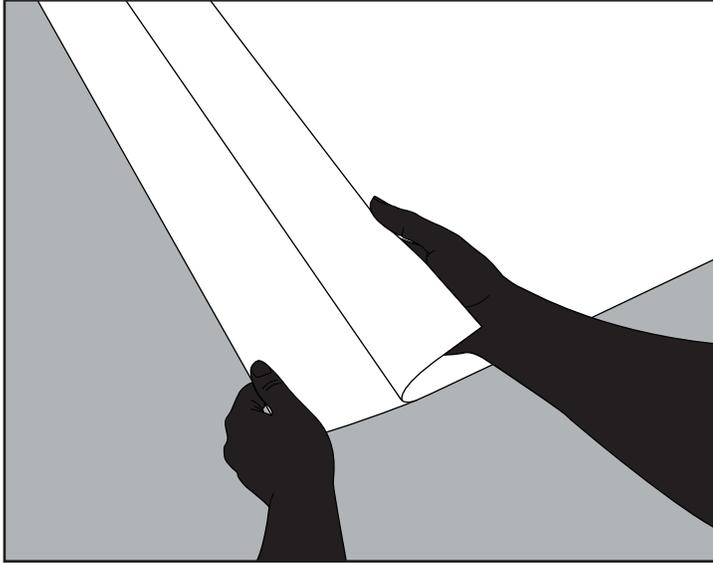

**Step 1:** Begin by removing a portion of the dry-erase surface from the paper backer.



**Step 2:** Apply each of the top corners to the surface you are trying to cover. Check that the product is level and aligned correctly. Simultaneously, smooth out surface as adhesive backer is pulled away.

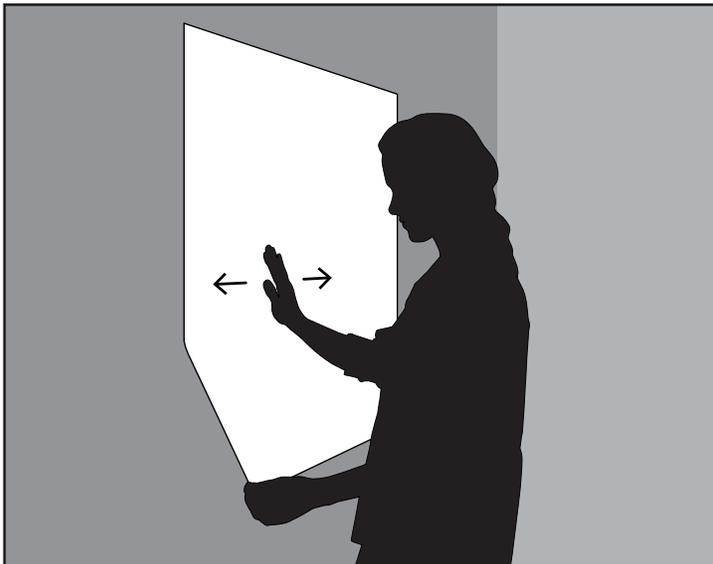

**Step 3:** Slowly press the adhesive against the wall or other surface, working any air bubbles to the nearest edge.



**Helpful Tip:** Any remaining bubbles can be removed by peeling nearest edge of dry-erase surface past bubble and slowly reapplying.